

Section 2

Mid Unit

CONTENTS

Precautions	2-1	Tiller Handle Disassembly and Assembly	2A-10
Precautions.....	2-1	Engine Holder / Driveshaft Housing / Mounts	
Precaution for Mid Unit	2-1	Components.....	2A-12
Housing and Bracket.....	2A-1	Engine Holder / Driveshaft Housing / Mounts	
Precautions.....	2A-1	Disassembly.....	2A-14
Precaution for Housing and Bracket	2A-1	Engine Holder / Driveshaft Housing / Mounts	
Service Instructions.....	2A-1	Assembly.....	2A-15
Lower Side Cover Components	2A-1	Engine Holder / Driveshaft Housing / Mounts	
Lower Side Cover Removal and Installation	2A-2	Related Component Inspection.....	2A-18
Tiller Handle and Handle Bracket Removal		Driveshaft Upper Oil Seal Replacement	2A-19
and Installation.....	2A-2	Clamp / Swivel / Steering Brackets	
Throttle Control Cable Installation and		Components.....	2A-20
Adjustment	2A-5	Clamp / Swivel / Steering Brackets	
Steering Friction Adjuster Disassembly and		Disassembly.....	2A-22
Assembly	2A-5	Clamp / Swivel / Steering Brackets Assembly ..	2A-24
Tiller Handle Components	2A-9	Clamp / Swivel / Steering Brackets Related	
		Components Inspection	2A-27

Precautions

Precautions

Precaution for Mid Unit

Refer to “General Precautions” in Section 00 (Page 00-1).

CENDK1112000001