

Section 1

Power Head

CONTENTS

Precautions	1-1	Precautions.....	1C-1
Precautions.....	1-1	Precaution for Engine Electrical Device	1C-1
Precautions for Powerhead.....	1-1	General Description	1C-1
Engine Control.....	1A-1	Sensor and Switch Description	1C-1
Precautions.....	1A-1	ECM Power Source.....	1C-4
Precautions on Engine Control Diagnosis.....	1A-1	Component Location	1C-5
General Description	1A-2	Location of Sensor and Switch.....	1C-5
Engine Control System Description	1A-2	Service Instructions	1C-5
Engine Control Module (ECM).....	1A-5	Resistance Check	1C-5
Caution System Description.....	1A-9	ECM Power Source Coil Peak Voltage	
Self-Diagnostic System Description.....	1A-11	Inspection.....	1C-6
Fail-Safe System Description.....	1A-13	ECM Power Source Coil Removal and	
Oil Change Reminder System Description.....	1A-14	Installation.....	1C-6
Component Location	1A-15	CKP Sensor Peak Voltage Inspection.....	1C-6
Engine Control System Components / Engine		CKP Sensor Removal and Installation	1C-6
Electrical Device Location	1A-15	Cylinder Temp. Sensor Removal and	
Diagnostic Information and Procedures.....	1A-15	Installation.....	1C-7
Troubleshooting with Self-Diagnostic Code	1A-15	Cylinder Temp. Sensor Inspection	1C-8
Self-Diagnostic Code “3 – 4” MAP Sensor.....	1A-15	IAT Sensor Removal and Installation.....	1C-8
Self-Diagnostic Code “1 – 4” Cylinder Temp.		IAT Sensor Inspection.....	1C-8
Sensor.....	1A-16	CMP Sensor Removal and Installation	1C-9
Self-Diagnostic Code “2 – 3” IAT Sensor.....	1A-17	CMP Sensor Inspection	1C-9
Self-Diagnostic Code “4 – 2” CKP Sensor	1A-18	MAP Sensor Removal and Installation.....	1C-10
Self-Diagnostic Code “2 – 4” CMP Sensor.....	1A-19	MAP Sensor Output Voltage Inspection.....	1C-11
Self-Diagnostic Code “2 – 2” Air Intake		IAC Valve Removal and Installation	1C-12
System	1A-20	IAC Valve Inspection	1C-12
Self-Diagnostic Code “3 – 2” MAP Sensor 2.....	1A-21	TPS Inspection.....	1C-12
Self-Diagnostic Code “4 – 3” Fuel Injector	1A-22	Emergency and Engine Stop Switch	
Self-Diagnostic Code “2 – 1” TPS (Throttle		Inspection.....	1C-13
Position Sensor).....	1A-23	Power Unit Mechanical	1D-1
Self-Diagnostic Code “1 – 1” Rectifier /		General Description	1D-1
Regulator (Over Charging).....	1A-23	Power Unit Construction Description	1D-1
Self-Diagnostic Code “5 – 3” Oil Pressure		Diagnostic Information and Procedures.....	1D-1
Switch	1A-24	Cylinder Compression Check.....	1D-1
Troubleshooting Without Self-Diagnostic		Oil Pressure Check	1D-1
Code	1A-24	Service Instructions	1D-1
IAC System Troubleshooting	1A-25	Valve Clearance Inspection	1D-1
Service Instructions	1A-26	Recoil Starter Removal and Installation	1D-1
How to Use The 26 Pin Test Cord	1A-26	Cylinder Head Cover Removal and	
Inspection of The ECM and Its Circuit.....	1A-27	Installation.....	1D-1
ECM Removal and Installation.....	1A-30	Air Intake Silencer Case Removal and	
Caution Lamp Inspection	1A-30	Installation.....	1D-3
Engine Electrical Devices	1C-1	Intake Manifold and Throttle Body	
		Components.....	1D-4

Intake Manifold Removal and Installation	1D-5
Throttle Body Removal and Installation	1D-7
Throttle Body Inspection	1D-7
Camshaft Pulley Removal and Installation.....	1D-7
Power Unit Removal and Installation	1D-8
Camshaft, Rocker Arm and Rocker Arm Shaft Removal and Installation.....	1D-16
Camshaft, Rocker Arm and Rocker Arm Shaft Inspection.....	1D-17
Cylinder Head Assembly Components	1D-19
Cylinder Head Removal and Installation	1D-20
Cylinder Head Disassembly and Assembly	1D-21
Cylinder Head Components Inspection and Servicing	1D-23
Pistons, Piston Rings, Connecting Rods, Cylinder and Crankshaft Components	1D-30
Pistons, Piston Rings, Connecting Rods, Cylinder and Crankshaft Disassembly and Assembly	1D-31
Cylinder, Piston and Piston Ring Inspection and Servicing	1D-39
Piston Pin and Conrod Inspection.....	1D-42
Crank Pin and Conrod Inspection	1D-43
Crankshaft Inspection	1D-45
Crankshaft Main Bearing Inspection	1D-46
Crankshaft Oil Seal Inspection.....	1D-48

Power Unit Lubrication1E-1

General Description	1E-1
Engine Lubrication Description	1E-1
Schematic and Routing Diagram.....	1E-1
Engine Oil Lubrication Chart.....	1E-1
Diagnostic Information and Procedures	1E-2
Oil Pressure Check	1E-2
Low Oil Pressure Caution System	1E-2
Powerhead Lubrication System Diagnosis.....	1E-2
Service Instructions.....	1E-2
Oil Pump Removal and Installation.....	1E-2
Oil Pump Disassembly and Assembly	1E-3
Inspection Oil Pump Component Parts	1E-4
Oil Pressure Switch Removal and Installation	1E-5
Oil Pressure Switch Inspection	1E-5

Power Unit Cooling System1F-1

General Description	1F-1
Water Cooling System Description	1F-1
Displacement Type Water Pump Description	1F-1
Schematic and Routing Diagram.....	1F-2
Cooling Water Circulation Chart.....	1F-2
Diagnostic Information and Procedures	1F-3
Powerhead Cooling System Diagnosis	1F-3
Service Instructions.....	1F-3
Thermostat Removal and Installation.....	1F-3
Thermostat and Related Items Inspection	1F-4
Water Pump Removal and Installation.....	1F-5
Water Pump Related Item Inspection	1F-5
Water Tube Removal and Installation.....	1F-5
Water Tube Related Item Inspection.....	1F-5

Fuel System 1G-1

Precautions.....	1G-1
Precautions on Fuel System Service	1G-1
General Description	1G-2
Electronic Fuel Injection System Description	1G-2
Fuel Delivery System Components Description	1G-4
High Pressure Fuel Pump Control System Description	1G-6
Air Intake Components Description.....	1G-7
Idle Air Control System Description	1G-9
Diagnostic Information and Procedures	1G-10
Fuel Pressure Inspection	1G-10
Fuel System Diagnosis	1G-12
Fuel Injection System Troubleshooting	1G-13
Service Instructions	1G-14
Fuel Pressure Relief Procedure	1G-14
Fuel Line Removal and Installation	1G-14
Fuel Line Inspection	1G-14
Fuel Leakage Check Procedure.....	1G-14
Inspection of Fuel Hose Connections	1G-15
Fuel Vapor Separator Removal and Installation	1G-15
Inspection of Fuel Vapor Separator	1G-16
High Pressure Fuel Pump Removal and Installation	1G-16
High Pressure Fuel Pump Inspection.....	1G-17
Fuel Injector Inspection with Injector in Place ..	1G-17
Individual Fuel Injector Operating Sound Inspection.....	1G-18
Fuel Injector Operating Signal Inspection	1G-19
Fuel Injector Removal and Installation	1G-20
Low Pressure Fuel Pump Removal and Installation	1G-22
Low Pressure Fuel Pump Inspection	1G-23
Fuel Tank Construction	1G-24
Fuel Tank Disassembly and Reassembly	1G-24
Fuel Tank Components Inspection	1G-24

Ignition System..... 1H-1

General Description	1H-1
Ignition System Description.....	1H-1
Ignition Control Description	1H-2
Component Location	1H-3
Ignition System Components Location.....	1H-3
Diagnostic Information and Procedures	1H-3
Ignition System Symptom Diagnosis.....	1H-3
Ignition System Troubleshooting	1H-3
Service Instructions	1H-5
Spark Plug Removal and Installation	1H-5
Spark Plug Inspection	1H-5
Ignition Coil Removal and Installation	1H-5
Ignition Coil Inspection	1H-6
Spark Plug Cap Inspection.....	1H-7
Ignition Coil Primary Peak Voltage Inspection	1H-7
CKP Sensor Inspection	1H-7
ECM Power Source Coil Inspection	1H-7
Emergency and Engine Stop Switch Inspection.....	1H-7

Starting System	1I-1	Recoil Starter Removal and Installation	1J-3
General Description	1I-1	Recoil Starter Disassembly and Assembly	1J-4
Electric Starter System Description.....	1I-1	Recoil Starter Components Cleaning and	
Start-In-Gear Protection System Description	1I-1	Inspection.....	1J-7
Component Location	1I-2	NSI Cable Installation and Adjustment.....	1J-8
Starting System Components Location.....	1I-2		
Diagnostic Information and Procedures	1I-2	Charging System	1K-1
Starter System Symptom Diagnosis	1I-2	General Description	1K-1
Starter System Troubleshooting	1I-3	Charging System Description.....	1K-1
Service Instructions	1I-5	Battery Requirement Description	1K-2
Starter Motor Removal and Installation.....	1I-5	Component Location	1K-2
Starter Motor Test	1I-6	Charging System Components Location.....	1K-2
Starter Motor Components.....	1I-8	Diagnostic Information and Procedures	1K-2
Starter Motor Disassembly and Assembly	1I-8	Charging System Diagnosis.....	1K-2
Starter Motor Components Inspection and		Service Instructions	1K-3
Servicing	1I-10	Charging System Construction	1K-3
Starter Motor Relay Inspection	1I-14	Flywheel Removal and Installation.....	1K-4
Neutral Switch Inspection	1I-15	Battery Charge Coil / CKP Sensor / Stator	
Starter Button Inspection	1I-16	Base Removal and Installation.....	1K-5
Manual Starting System	1J-1	ECM Power Source Coil / Battery Charge Coil	
Precautions.....	1J-1	/ CKP Sensor / Stator Base Removal and	
Precaution for Manual Starting System.....	1J-1	Installation	1K-10
General Description	1J-1	Battery Charge Coil Inspection	1K-15
Manual Starting System	1J-1	Rectifier / Regulator Removal and Installation ..	1K-15
Service Instructions	1J-2	Rectifier / Regulator Inspection	1K-16
Recoil Starter Components	1J-2	Battery Relay Inspection	1K-17
		Fuse Inspection.....	1K-18