

Precautions

Precautions

Precautions for Powerhead

CENDK1111000001

Refer to “General Precautions” in Section 00 (Page 00-1).

NOTICE

If the electrical circuits is shorted while servicing the power head, the powerhead electrical circuit could be damage seriously.

When the intended service operation does not require electric power supply from the battery, be sure to disconnect the negative cable at the battery before starting the service work.
