

TABLE OF CONTENTS

NOTE

For the screen toned sections with asterisk (*) in the "TABLE OF CONTENTS" below, refer to the same sections of the service manual mentioned in the "FOREWORD" of this manual.

Precautions	00-*
Precautions	00-*
General Information	0-i
General Information	0A-1
Maintenance and Tune-Up.....	0B-1
Power Head	1-i
Precautions	1-*
Engine Control	1A-1
Engine Electrical Devices.....	1C-1
Power Unit Mechanical	1D-*
Power Unit Lubrication.....	1E-1
Power Unit Cooling System	1F-*
Fuel System	1G-*
Ignition System.....	1H-*
Starting System.....	1I-1
Manual Starting System.....	1J-*
Charging System.....	1K-1
Mid Unit	2-*
Precautions	2-*
Housing and Bracket.....	2A-*
Lower Unit	3-*
Precautions	3-*
Right Hand Rotation Unit	3A-*
Wire / Hose Routing	4-i
Precautions	4-*
Wire Routing	4A-1
Fuel / Water Hose Routing.....	4B-*

