

Starting System

Service Instructions

 
Ignition Switch Inspection (Remote Control Model)

CENDK1121906009

Inspect the ignition switch using the following procedures:

- 1) Disconnect the ignition switch from remo-con box wiring harness.
- 2) Check continuity between wiring leads at the key positions shown in the chart.
- 3) If out of specification, replace the ignition switch.

Special tool


 : 09930-99320 (Digital tester)

Tester knob indication

Continuity (•)))

Key position	Switch Lead Wires					
	B	G	W	Gr	Br	O
OFF	○	○				
ON			○	○		
START			○	○	○	
FREE						
PUSH			○	○	○	○

○ — ○ : Continuity
19J011190041-03

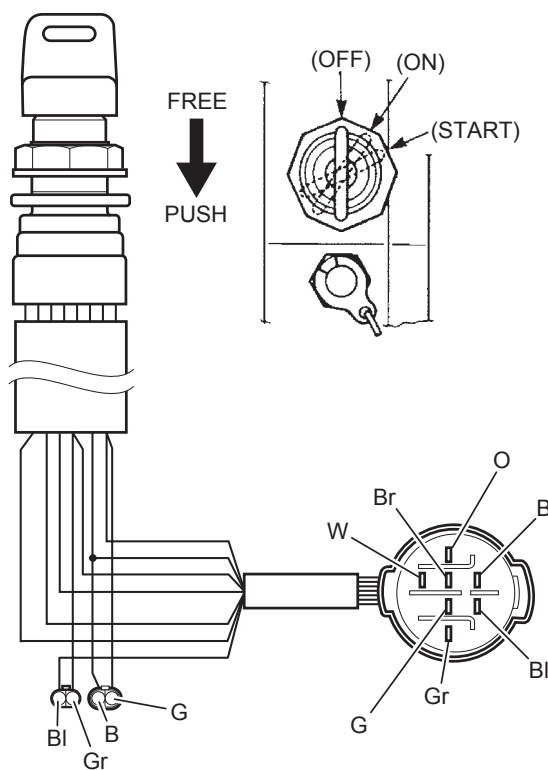

IDK112190001-01