




A MASCO Company
Phone: (800) 421-0001
Fax: (517) 439-9644
Internet: www.alsons.com

Specifications

Classic 24" Wall Bar 25011 Series

- Concealed single screw mounting with tile offset
- Made of metal, acrylic and engineering grade ABS plastic components
- Clear acrylic adjusting knob
- Adjustable shower mount for positioning shower height
- Canadian Standard Association Certified - B125-93
- Pin mount system; accommodates swivel connector
- Available in boxed packaging

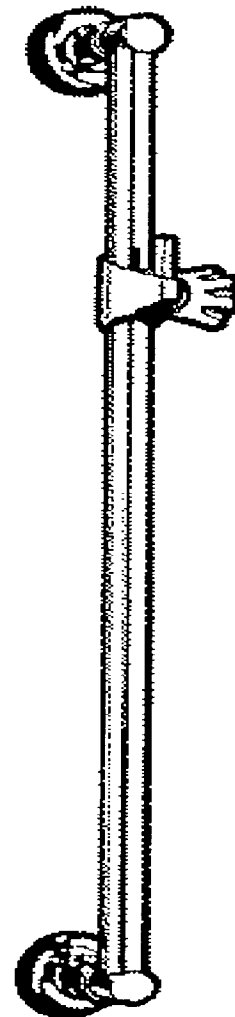

Finishes	Model Numbers
Chrome	25011 C BX
Brilliance Polished Brass	25011 2010 BX




Made in the USA
Revised 2/06

SELECT LOCATION


1

Your bar unit is a beautiful bath accessory and should be located so it looks good and performs as intended. Pictured are some typical installations as suggestions only, pick a location that suits your family's needs.

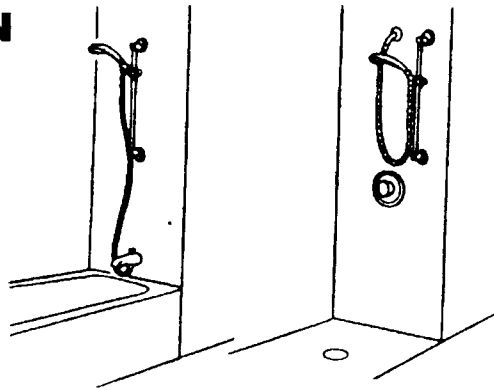


2

Select a convenient height based on your family's needs. Note: Locate so there will be slack in the hose when shower is in extreme up or down position.

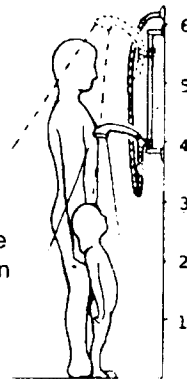

MOUNTING BAR

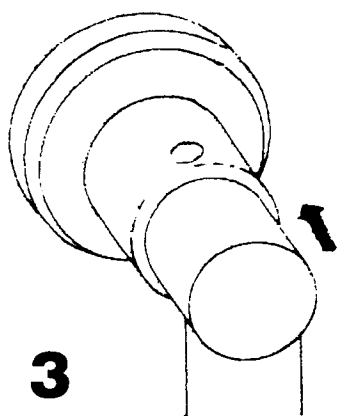


3

Place end mount of wall bar into the mount – do not tighten the set screw.




4

Position bar on wall at desired position.

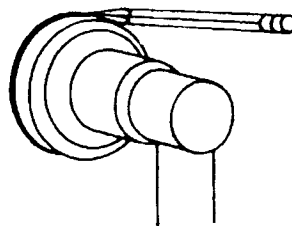


5

Draw circle around top mount with soft pencil.

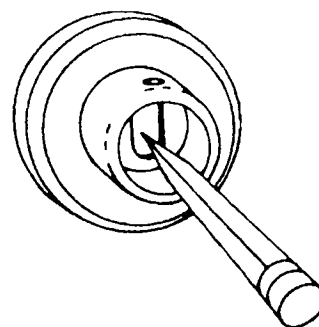


6

Remove bar mount from bar. Place in marked position on wall and mark center screw hole on wall. Do not mark lower mount at this time.

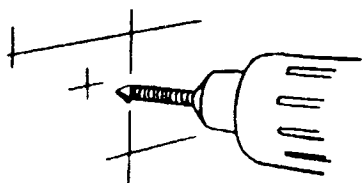


7

Drill hole for top mount. Use 1/4" carbide drill for ceramic tile.

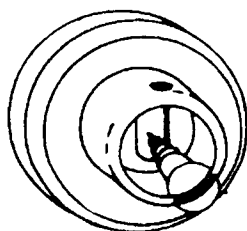


9

Secure mount to wall with screw. Note: Allen set screw must be at top of mount.

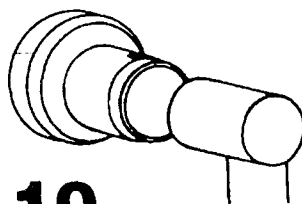


10

Place bar into mount. Do not tighten Allen set screw.

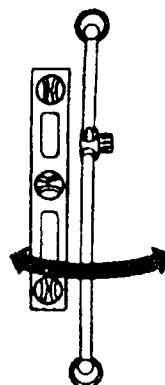


11

Align bar and mark bottom mount as in step 5.

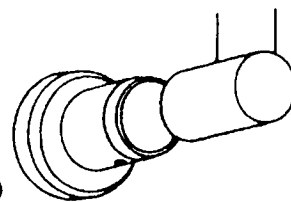


12

Remove bar from both mounts. Secure lower mount to wall as in steps 7-9 with Allen set screw facing down. Replace bar onto mounts. Check alignment with level. If not plumb, remove bar, loosen mount screws and adjust accordingly, retighten screws and replace bar.

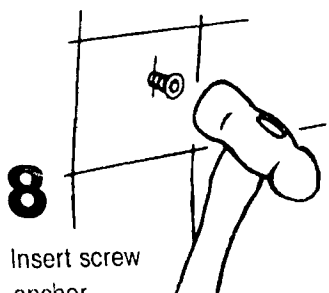

8

Insert screw anchor.

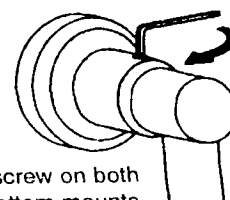

13

Tighten Allen set screw on both top and bottom mounts.